

## UV Disinfectant Box – User Manual

### Instructions

Connect the UV Disinfectant Box and the charging cable provided to charge the box.

Open the box and put the mobile or other accessories inside. Close the lid.


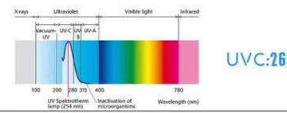


Press the Switch once and the 60s led with light up, starting the sterilization cycle for 60s. (recommended for mobile phones)

Press the Switch twice for a 300s sterilization cycle - the 300s led with light up to indicate a longer cycle. (recommended for other accessories)

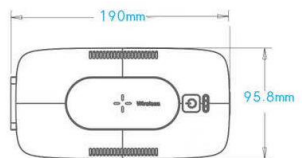

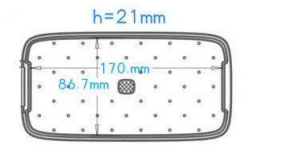
If you accidentally open the lid during the sterilization cycle, the accidental protection function will be activated and stop the sterilization process.

Wireless mobile charging – Keep your mobile on top of the closed box to start charging your phone. You can wireless charge your phone even when the sterilization cycle is in progress.

Please visit our website [www.srportables.com](http://www.srportables.com) for more details.

**UV-C BOX**

Multifunction UV light phone sterilizer

1. Input : DC 5V / 9V
2. Wireless output : 10W
3. Battery capacity : 1000mah ( work 10 times for "b gear" )
4. UV light Power: 2W\*2
5. Disinfection gear: a.60s b.300s  
60s for bacterial(for smartphone)  
300s for Viruses and spore bacteria (for key, Toothbrush, Jewelry, etc)
6. Product Size: 190\*95.8\*38mm
7. Sterilizer case size: 170\*86.7\*21mm
8. Material: ABS 94 V1
9. Sterilizer components
  - a. Ultraviolet LED\*2 265nm
  - b. Sterilizer case
  - c. Accidental opening protection device
10. Color: white

### Contact Us

Please visit our website [www.srportables.com](http://www.srportables.com) for more information or to contact our technical team for assistance.